

Application Note

AN #: 227

DATE: 21-Oct-02

Page 1 of 1

PYRAMID MODEL #: SVR-200 / SVR-250 / SVR-300
RADIO MODEL: Motorola CDM 1550LS+ /w PassPort Trunking
ENGINEER: C. Carbajal

APPROVAL INITIALS

ENGINEER _____

DEPT. HEAD _____

Connections:	SVR	Function	Radio
	Black/Shield	Ground	Accessory Connector Pin 7
	White	Tx Audio Out	Accessory Connector Pin 2
	Blue	Remote enable/disable	External Switch To Ground
	Green	PTT Out	Accessory Connector Pin 3
	Red	Switched B+	Accessory Connector Pin 13
	Yellow	Rx Audio In	Accessory Connector Pin 11
	Violet	COR	Accessory Connector Pin 4
	Brown	Local Mic In	N/C
	Grey	On Air Detect	Accessory Connector Pin 8

SVR	JP1	[-]	Remote Enable	SVR	Mobile COR Polarity:	Low
Jumpers:	J1	[Out]	Tx audio level	Program:	Mobile Type:	Conv/
	J2	[Out]	Tx audio impedance		Trunk.	
	J4	[Out]	Local mic audio loop		On-Air Polarity:	Low
	J5	[Out]	Local mic PTT loop		Tx Audio Response:	De-emp
	J6	[Out]	Local mic sensitivity		Rx Audio Response:	Flat
	J7	[Out]	Receive sensitivity			
	J8	[+]	Pull up resistor			
	J9	[Out]	COR Pull up resistor			

Additional Modifications (SVR-200 / SVR-250 / SVR-300):

Additional Modifications (Radio):

1. From the Motorola CPS --> **Radio Configuration**, program the **Accessory Pins**:

Pin #3 - External Mic. PTT (input) *Active Low*

Pin #4 - Option Board 2 (Output)

Pin #8 - Clear To Send (output) *Active Low*

2. From the Motorola CPS --> **Radio Configuration**, program the **Accessory Configuration**:

1) RX Audio Type = Flat Audio

2) Ext. PTT Audio Source = Ext Mic Audio

Note: Local Mic. Repeat is not supported by the CDM-1250/1550 Radio.