

Application Note

AN #: 221B

DATE:21-Jun-06

Page 1 of 1

PYRAMID MODEL #: SVR-200 / SVR-250 / SVR-300

RADIO MODEL: Johnson 5300 Series Mobile

ENGINEER: W. Carlin

APPROVAL INITIALS

ENGINEER

DEPT. HEAD

Order the Pyramid 5300 interface cable Part # 7553-10-1045 for the SVR-200

Connections:	SVR	Function	Radio
			J601 DB25 {Universal Interface Cable} {EFJ PN 597-2002-245}
	Black/Shield	Ground	J601 Pin 24
	White	Tx Audio Out	J601 Pin 12
	Blue	Remote enable/disable	J601 Pin 14
	Green	PTT Out	J601 Pin 1
	Red	Switched B+	J601 Pin 22
	Yellow	Rx Audio In	J601 Pin 10
	Violet	COR	J601 Pin 6
	Brown	Local Mic Audio	J601 Pin 11
	Grey	On Air Detect	J601 Pin 5

SVR	JP1	[+]	Remote Enable	SVR	Mobile COR Polarity:	Low
Jumpers:	J1	[Out]	Tx audio level	Program:	Mobile Type:	Conv/Trunk
	J2	[Out]	Tx audio impedance		On-Air Polarity:	High
	J4	[Out]	Local mic audio loop		Tx Audio Response:	De-emp
	J5	[Out]	Local mic PTT loop		Rx Audio Response:	Pre-Emp
	J6	[Out]	Local mic Sensitivity			
	J7	[Out]	Rx Sensitivity			
	J8	[-]	Pull up resistor			
	J9	[Out]	MCOR pull up resistor			

Additional Modifications (SVR-200 / SVR-250 / SVR-300): None

Additional Modifications (Radio):

Note: Requires radio firmware V x.xx or greater and PCConfigure software version x.xx or later.

1. Replace fuse F1 with a 3 Amp fast blow type surface mount fuse (adjacent to J5 on 5300 logic pcb).
2. Program one of the soft keys to enable/disable the SVR by selecting "Radio Wide Options", "Assign Buttons", click on the desired key and select "Remote Access".