



# Desert Flower Directions

David Roy 1987


- Hold the template against the wall in the desired location with the bottom edge level.
- Place a sharp instrument through the marked holes on the template to transfer their location to the wall.
- Drill pilot holes. If the wall is sheetrock or plaster use plastic anchors.

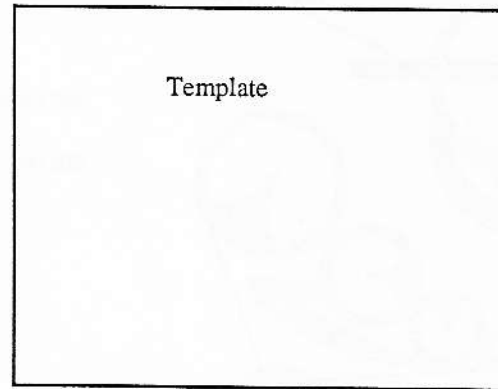

- Screw the lower part of the sculpture to the wall.
- Screw the upper round base piece to the wall.
- Remove the tape and unloop the string from the weight.
- Place the string over the 3 lower assembly wheels as shown in the diagram.
- Remove the nuts from the back of the motor wheel cover. Line up the "a" holes and slide the small shafts through the holes in the mounting bracket in front of the motor. Put the nuts back on the shafts and tighten.

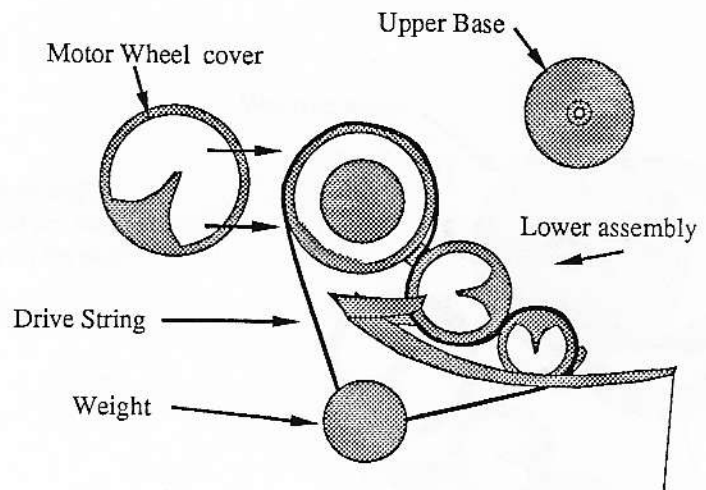


- Unscrew the knob on the round upper base piece. Slide rear wheel onto the shaft. Screw the knob back in place. Hand tighten only.

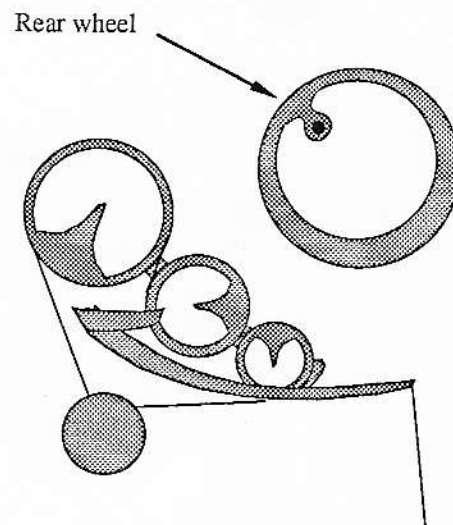


## Desert Flower directions continued ...

- Unscrew the knob on middle wheel. Slide the next wheel onto the shaft. Screw the knob back in place. Hand tighten.
- Hook the loop in the string that hangs from the lower arm onto the small hook behind the front wheel mounting bracket.

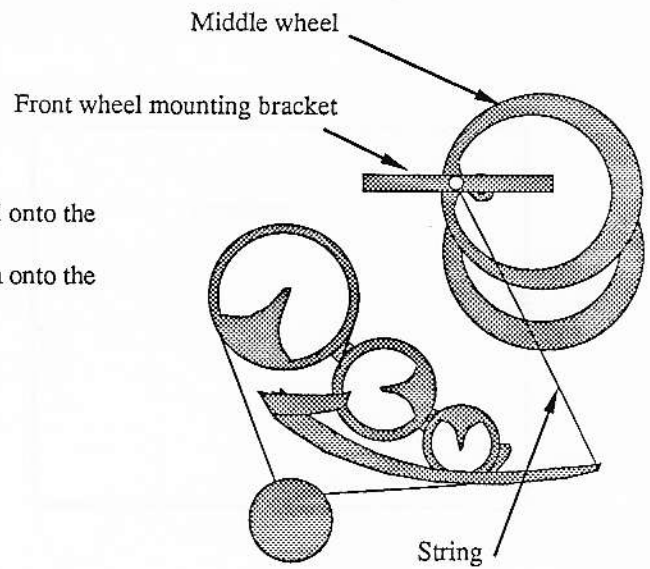

- Remove the nuts from the back of the front "weaving" wheel. Slide the small shafts through the holes in the mounting bracket on the middle wheel. Put the nuts back on the shafts and tighten.

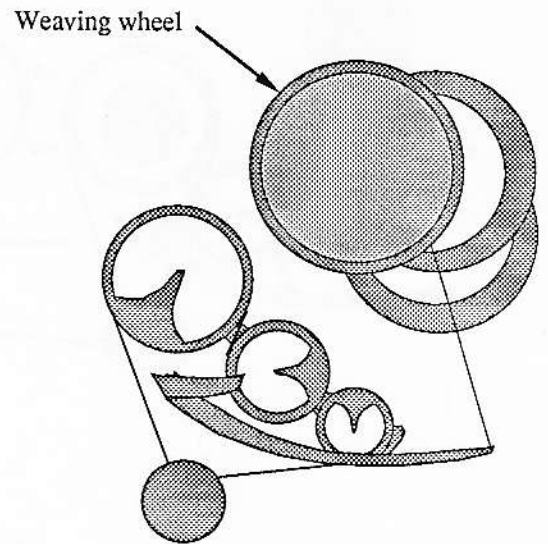

Plug the electrical cord into a normal household outlet and turn the sculpture on.

Enjoy!