


WOOD THAT WORKS

DAVE & MARJI ROY

Synthesis

© 1983

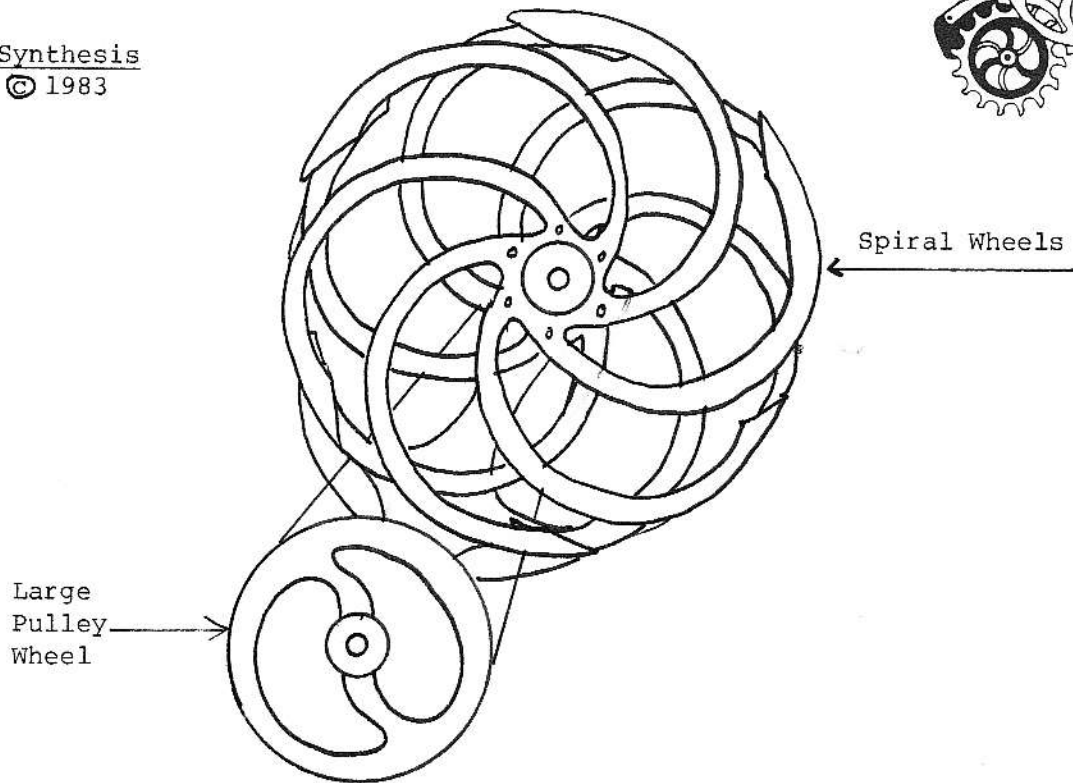

Directions:

To Mount on Wall:

1. Hold the backboard in the desired location against the wall. Level the bottom edge.
2. Place a sharp instrument through the mounting screw holes marking their positions on the wall.
3. Drill pilot holes. If the wall is plaster or sheetrock use plastic anchors.
4. Screw the sculpture to the wall.

To Wind:

1. Turn the large pulley wheel counter-clockwise 20 turns.

To Start:

1. Turn both spiral wheels clockwise.