


WOOD THAT WORKS

DAVE & MARJI ROY



WILDFIRE II

© 1983

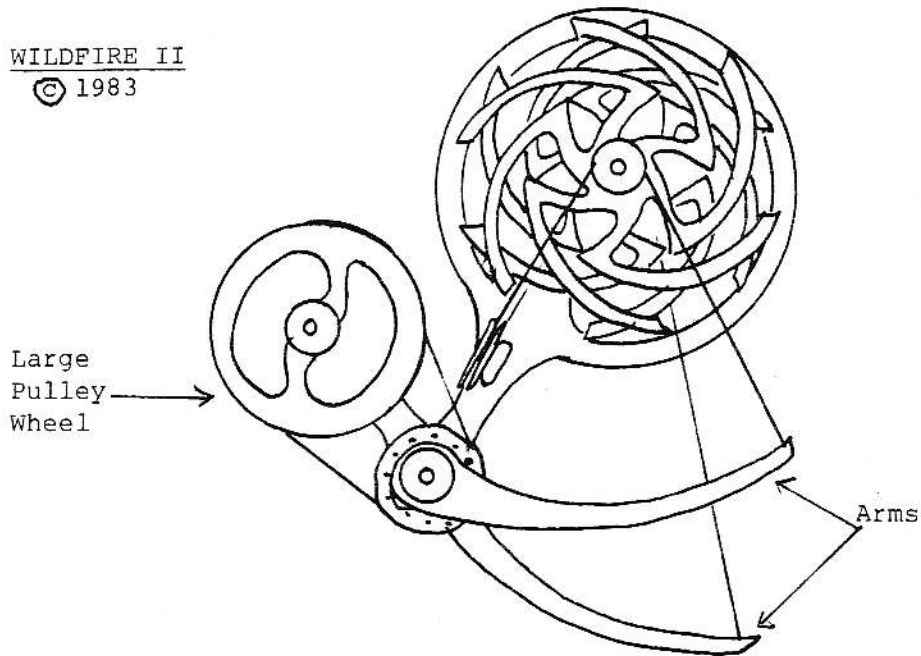

To Mount on Wall:

1. DO NOT remove the tape holding the strings in place.
2. Hold the backboard in the desired location against the wall. Level the bottom edge.
3. Place a sharp instrument through the screw holes for mounting marking their positions on the wall.
4. Drill pilot holes. If the wall is sheetrock or plaster use plastic anchors.
5. Screw the sculpture to the wall.
6. Remove the tape.

To Wind:

1. Turn the large pulley wheel counter-clockwise 20 turns.

To Start:

1. Gently push down which ever arm is in the upper most position.