

PERFECT ADJUSTMENT
OF THE BRAKE LINES OF

WILDCAT & WILDCAT TE.




WILDCAT is a real allround paraglider. It is suitable for your first flights after schooling, for cozy thermalling at your home flying site up to ambitious cross country flights.

That every pilot feels at ease with WILDCAT the length of the steering lines should be adapted to the pilot's flying style. This is especially important with WILDCAT because its handling can be adjusted gradually beginning from „super safe“ for beginners to „very direct“ for advanced pilots depending on the length of the brake lines.

MEASUREMENT OF STEERING LINES LENGTH

Fix the brake main line on one end and measure it with a drag of 25 kg from the knot at the grip to its end at the next line level. Important is the drag.

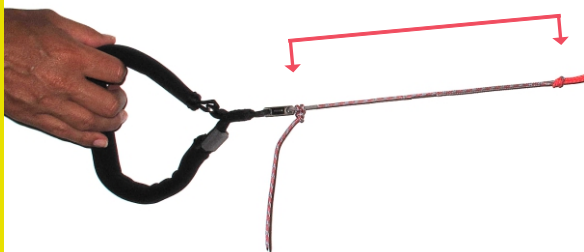

THE CORRECT
-KNOT-

To fix the brake line at the new curl you need this knot.

Besides, the setting of the brake lines is dependent not only on the experience of the pilot, but also on the grip position:



Grip position „Metro“ // super safe

Paraglider size	Brake line length
WILDCAT Large:	322 cm (126.77 inch)
WILDCAT Medium:	307 cm (120.87 inch)
WILDCAT Small:	295 cm (116.14 inch)
WILDCAT X-Small:	286 cm (112.6 inch)



Grip position „Ski pole“ // standard

Paraglider size	Brake line length
WILDCAT Large:	324 cm (127.56 inch)
WILDCAT Medium:	309 cm (121.65 inch)
WILDCAT Small:	297 cm (116.93 inch)
WILDCAT X-Small:	288 cm (113.39 inch)



Grip position „Pro“ // very direct

Paraglider size	Brake line length
WILDCAT Large:	326 cm (128.35 inch)
WILDCAT Medium:	311 cm (122.44 inch)
WILDCAT Small:	299 cm (117.72 inch)
WILDCAT X-Small:	289 cm (113.78 inch)